H.C.B-A1636

DAF (CF 85) CRANKSHAFT FRONT OIL SEAL INSTALLER (35-43 TONS) (EURO 4/5)













IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY.

- **Warning! Ensure Health and Safey, local authority and general work shop practice regulations are adhered to when using tools.
- XDO NOT use tool if damaged.
- *Maintain tool in good and clean condition for best and safest performance.
- *WARNING! The warnings, caution and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understand that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

H.C.B-A1636DAF (CF 85) CRANKSHAFT FRONT OIL SEAL INSTALLER (35-43 TONS) (EURO 4/5)

Specifiation

No.	Name	Description	Q'ty	Remark
1	Installing guide	D:ψ134, d:ψ88.3x18L	1	
2	Installing plate	D:ψ168, d:ψ134.3x81L	1	
3	Installing nut+ bearing	M16xP 2.0	1	
4	Screw of installing guide	M10xP1.5x40L	4	

■ Feature: With this tool, you can install the oil seal without damaging the oil seal or parts.

■ Oil seal OEM no.: 1684105. 1876189

■ Application: DAF(CF 85) 35-43 tons (Euro 4/5) truck. (360/ 410 /460)

■ Oil seal size: 134x161x16 mm

Installing Operation



Step 1
Put No.1 in front of the crankshaft.
Screw No.4 to tight.



Step 2 Put on the new oil seal.



Step 3
Put No.2.
Screw No.3 to tight.
Then finish installing oil seal.