



Cordless Chain Saw

GE-LC 18/25 Li Kit (1x3,0Ah)

ltem No.: 4501760

Ident No.: 21030

Bar Code: 4006825608335

The Einhell cordless GE-LC 18/25 Li Chainsaw Kit combines the outstanding performance of an Einhell product with a high-quality OREGON guide bar and chain. Kickback protection with an instant-reaction mechanical chain brake and a stop claw keep you safe while you are working with the chainsaw. The rugged metal stop claw keeps the saw stable while you are working, and the ergonomic handle gives you a comfortable grip on the chainsaw. No tools are needed to adjust the chain tension or replace the chain. A big filler opening of the automatic chain lubrication system makes it easy to top it up if necessary. The set includes a fast charger and battery which can be used for all Power X-Change family products.

OWER X-CHANGE

Features & Benefits

- Battery system Power X-Change
- Battery charge level indicator with 3 LEDs
- Battery can be used for other Power X-Change products
- System high-speed charger included
- High-quality chain and bar from OREGON
- Toolless chain tensioning and changing
- Ergonomic handle
- Sturdy stop claws made of metal
- Kickback protection with mechanical instant chain brake
- Big filler opening
- Automatic chain lubrication
- Chain catch bolt

Technical Data

- Accumulator	18 V 3000 mAh Li-Ion
- Charging time	1h
- Sword length	250 mm
- Max. cutting length	23 cm
- Chain cutting speed	4.5 m/s
- Oil tank capacity	200 mL
- Number of accumulators	1 Pieces

1088 | 2208 | 2760

Logistic Data

- Product weight (kg)	2.97 kg	
- Gross weight (kg)	4.97 kg	
- Dimensions single packaging	225 x 480 x 245 mm	
- Pieces per export carton	4 Pieces	
- Gross weight export carton	21.4 kg	
- Dimensions Export Carton	500 x 380 x 515 mm	

- Container quantity (20"/40"/40"HC)









Available as special accessories



Spare Bar 25cm 1,1 Chain Saw Accessory Item No.: 4501753 Bar Code: 4006825607017 Einhell Accessory

18V 2,0Ah Power X-Change Battery Item No.: 4511395

Bar Code: 4006825610369

18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042

Bar Code: 4006825613704 Einhell Accessory

Einhell Accessory







Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory







Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory





18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

Spare Chain 25 cm 1,1 40T 3/8 Chain Saw Accessory Item No.: 4501754

Bar Code: 4006825607024

18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396

18V 5,2Ah Power X-Change Plus

Bar Code: 4006825610376

Einhell Accessory

Einhell Accessory

18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

Battery-Running-Times

One Battery for All	sawing ¹
	(pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm